


West Coast Weather Vanes

Security Device Installation Instructions

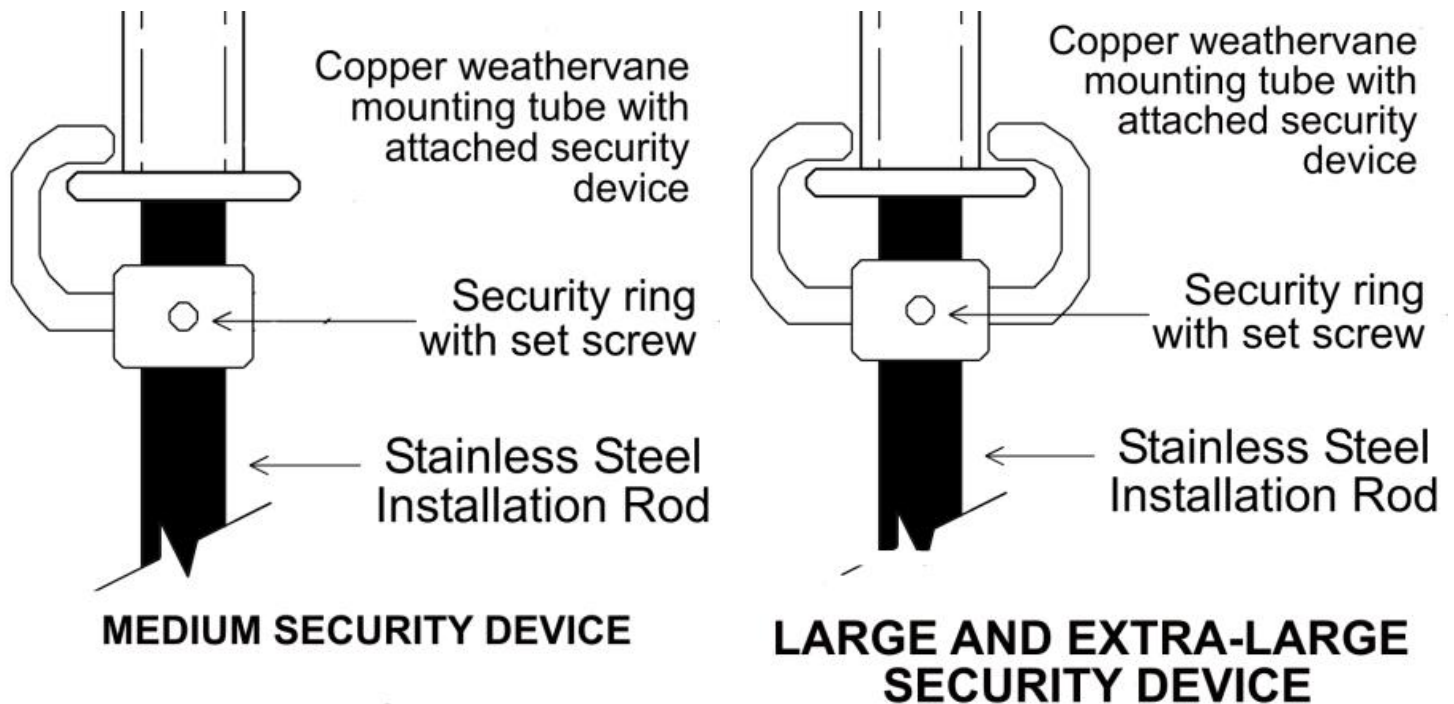

Security Device Assembly:

- Locate security ring in small parts box.
- Holding the weathervane sculpture piece upside down, dab grease inside mounting tube, push down one pivot ball, then add more grease. *Note: The remaining steel ball is a spare in case you drop the first one during the installation.*
- Before sliding the weather vane over the vertical installation rod, back off but don't remove set screw(s) and align the security ring just below the copper mounting tube that extends down out of the weathervane sculpture piece. Make sure security ring's arm(s) are positioned around the ring soldered to the bottom of the copper weathervane mounting tube. (See above). Don't bend arm(s).
- Hold your finger over the base of the tube containing the steel ball to keep it from falling out and slide the vane over the top of vertical stainless steel installation rod and gently slide sculpture down. *Note: If your stainless steel rod is beveled and reduced from $\frac{3}{4}$ " (1.9 cm) to $\frac{3}{8}$ " (.95 cm) for the top 10" (25 cm), check to see that the vane clears the beveled section of the spire. If it does not, add the second chrome pivot ball and check again.*
- Tighten security device set screw(s).
- Turn weathervane to see that it is not rubbing on the security ring.